


23722-74 Automatic vent



B. Hold the waste tank in the same position as on photo A, turn the automatic vent to the left and take it out.

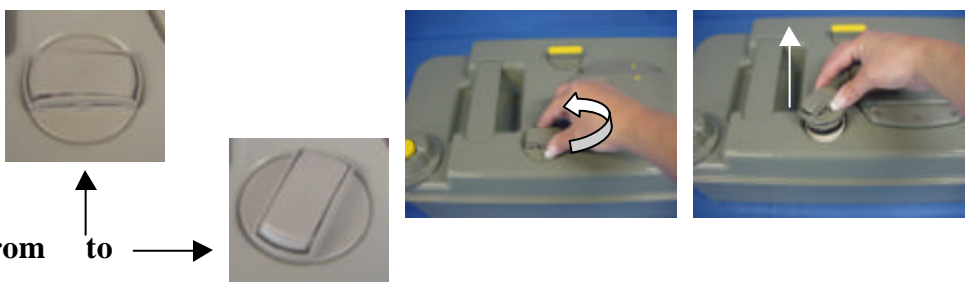

Turn from to

C. Place new automatic vent in the waste tank and turn it to the right to lock it in the waste tank.

